





GripLoc™ Fittings Installation Instructions


GLPC-3-0724



Assembly method applies to
all GripLoc™ fittings




← GripLoc™ coupling shown as example.




EASY INSTALLATION


STEP 1 Cut pipe square. Deburr and bevel.

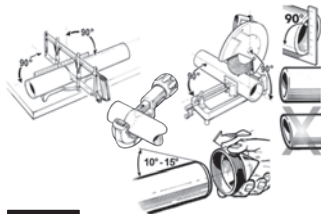


STEP 2 Measure from pipe stop to the end of the coupling.



STEP 3 Measure and mark pipe.



STEP 4 Insert pipe all the way to mark.
Pipe should bottom out at the pipe stop.

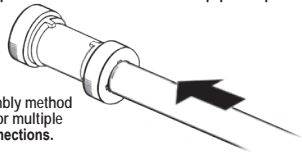

Repeat assembly method
if required for multiple
fitting connections.

WARNING: DO NOT INSERT FINGERS. ENSURE THAT PIPE AND FITTINGS ARE FREE OF DIRT AND DEBRIS PRIOR TO INSTALLATION.



SPEARS® MANUFACTURING COMPANY
15853 Olden Street, Sylmar, CA 91342
PO Box 9203, Sylmar, CA 91392
(818) 364-1611 www.spearsmfg.com







GripLoc™ Conexiones Instrucciones de Instalación

GLPC-3-0724

El método de ensamblaje se aplica a todas las conexiones GripLoc™




Acoplamiento GripLoc™
mostrado como ejemplo




INSTALACIÓN FÁCIL


PASO 1 Corté la tubería a escuadra.
Des-rebabé y biselé.

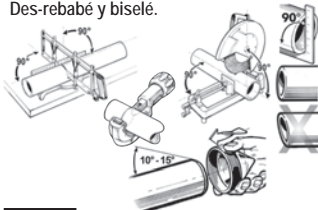

PASO 2 Medir desde la parada del tubo hasta el final del acople.



PASO 3 Medir y marcar el tubo.



PASO 4 Introduzca el tubo hasta adentro con un movimiento de torcer. El tubo debe tocar al fondo de la parada del tubo.



Repetir el método de montaje si es necesario para múltiples conexiones de ajuste.

ADVERTENCIA: NO INTRODUZCA LOS DEDOS. ASEGURESE DE QUE EL TUBO Y LAS CONEXIONES ESTÉN LIBRES DE SUCIEDAD Y DESECHOS ANTES DE INSTALAR.



SPEARS® MANUFACTURING COMPANY
15853 Olden Street, Sylmar, CA 91342
PO Box 9203, Sylmar, CA 91392
(818) 364-1611 www.spearsmfg.com

